

SpUpNIC User Manual

- *If you find this webpage already loaded in the browser, please refresh the page to ensure that it is current!*

SpUpNIC Pointing Restrictions

Please note that SpUpNIC extends far enough from the bottom of the telescope that the instrument could potentially collide with the north pier when pointing east between declinations of -60 and -80. The situation is aggravated by the fact that the telescope can only be used on the east side of the pier. The result is quite severe pointing restrictions in the east, unfortunately for a declination range that includes the Magellanic Clouds! One is able to auto-slew into that dec range up to an hour angle of -2, and extremely careful manual pointing done from the console on the telescope floor can gain an additional half an hour. The absolute pointing limits are thus -2.5 hours for declinations between -65 and -75.

When pointing automatically from the control room, please take note of where the cyan star appears on the TCS crash-limits plot when you start the slew. If the telescope would need to move through that problem region, abort the auto-slew and rather point manually, using the console on the dome floor.

SpUpNIC Call list

SpUpNIC Instrument software: Carel van Gend - 076 818 1312

Rear-slit-viewer camera & images: Steve Potter - 072 246 7368

Commissioning/general issues: Lisa Crause - 082 498 4780

Telescope software issues: standby **113 (021 201 5178) or 9118

Electronics Issues: standby **103 (021 201 5179) or 9117

Mechanical Issues: standby **104 (021 201 5180)

Introduction

This is the current user manual for SpUpNIC (Spectrograph Upgrade - Newly Improved Cassegrain), the recently upgraded spectrograph at the 1.9-m telescope's Cassegrain focus. See the **SpUpNIC paper** presented at the 2016 SPIE Astronomical Telescopes and Instrumentation conference in Edinburgh for more information about the instrument, and please cite the **SpUpNIC refereed science paper** published in the SPIE Journal of Astronomical Telescopes, Instruments and Systems.

SPUPNIC

The spectrograph's collimator and camera optics have been replaced, the instrument has a new detector, all of the mechanisms are now under PLC control and the software (both for instrument control + quick-look data reduction) has been completely re-written. There is also a rear-of-slit camera that makes it easier to acquire targets and focus the telescope properly.

The instrument has two sub-systems, the PLC sub-system (controlling everything that moves) and the detector sub-system (controlling the data acquisition process). The drivers for these sub-systems run as stand-alone processes, and the user interface runs as a separate process on top of these. Typically, users will connect to the graphical user interface (GUI), although certain diagnostic functions may be accessed using the command line interfaces.

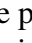

We hope that you enjoy using SpUpNIC and that you will provide the instrument team with feedback and suggestions by emailing lisa_at_saao.ac.za.

Recent Updates

- **October 2023:** The new autoguider that forms part of the instrument selector to accommodate both SpUpNIC and SHOC has been commissioned. There are slight changes to the operation of the autoguider, and observers now needs to connect to a new TCS PC (tcs74v4.suth) to use the telescope with SpUpNIC.

Quick Start

This is a basic overview of taking data; if you're unsure about anything, the Advanced User Guide section contains more information.

- Log into the SpUpNIC PC. If observing remotely, connect to spupnic.suth.saao.ac.za by VNC. Username & password available from support staff.
- If the instrument Control and Quick-Look interfaces are not running, they may be started from the panel on the left edge of the left screen. The SpUpNIC Control GUI is started with the absorption spectrum icon , and the Quick-Look GUI from the emission spectrum icon .
- Ensure that the grating you require has been installed by a technician - **observers must not handle the gratings** (see the grating change instructions in the Start of Run Section), and then set the grating to the required angle.
- Check that the required filter is in the beam (or left open if required).
- Run a Hartmann routine (see the Advanced User Guide) to establish the best focus for the spectrograph.
- The required spectrograph camera focus should be set automatically after a Hartmann run - check that this is the case.
- Set the slit width.
- Select the exposure type (ARC, BIAS, SCIENCE, FLAT, TEST).
- If appropriate, set the exposure time and number of exposures.
- Load your target catalogue file.
- Select a target from the target catalogue file so that the object name and coordinates will go into the fits header, and can be read by the TCS.
- If taking a science image, acquire the target, and ensure that it is visible through the slit and in focus.
- If taking an arc, ensure that the arc mirror is in-beam, and the required arc lamp is on.
- Select the SCIENCE exposure type after taking an arc, this will turn off the arc lamp and remove the arc mirror.
- Start the exposure with the *Expose* button.

- The countdown timer will show the time remaining, and the progress bar will first show the exposure completion state, and then the readout state.
- The software remembers settings used previously for given exposure types (e.g. 3 x 600 sec for a SCIENCE observation, or 25 x 30 sec for FLAT) so keep an eye out for this before you hit *Expose* for a new setup.

SpUpNIC User Interfaces

SpUpNIC's displays are labelled "https://topswiki.sao.ac.zaMonitor 1" https://topswiki.sao.ac.za and "https://topswiki.sao.ac.zaMonitor 2" https://topswiki.sao.ac.za, and are located to the right of the TCS monitor in the warm room. To launch the SpUpNIC Control GUI, click on the absorption spectrum icon in the menu bar on the left-hand-side of Monitor 1. All of the spectrograph sub-systems (e.g. grating angle, slit width, arcs, exposures) are controlled from this GUI.

There's an accompanying SpUpNIC Quick-Look GUI https://topswiki.sao.ac.za/index.php/Quick_Look_Tool , which displays each spectrum after readout and allows basic extraction and wavelength calibration. To launch the SpUpNIC Quick-Look, click on the emission line icon below the absorption spectrum icon on the left-hand edge of Monitor 1.

The Instrument Schematic

Normal operations are performed in the *Main View* tab of the SpUpNIC Control interface.

-
-

On the right-hand-side is a graphical representation of the instrument, which shows the light path through the various components controlled by the GUI. You can click on the arc mirror, rear-of-slit mirror and Hartmann shutters to move them in and out of the beam, and on the arc lamps and slit illumination to switch them on and off. **Note that since the installation of the instrument selector in February 2024, we no longer move the guide mirror - this has been replaced by the insertion of a fold mirror from the TCS.** A blue border surrounding the graphic indicates that the spectrograph is configured for acquisition or calibration, i.e. some component is in the beam that would obstruct its path to the science detector. If the system is correctly set up for a science exposure, there will be no coloured frame and the red light-path will reach the detector.

Detailed Users Guide

- The SpUpNIC Control interface has a number of tabs:
 - ◆ The *Main View* tab, in which you'll spend most of your time.
 - ◆ The *RoScam* tab, which will later include the rear-of-slit GUI.
 - ◆ The *Advanced* tab, used at the start of the run, and which may be used if things go wrong (e.g. to reset or initialise mechanisms).
 - ◆ The *Engineering View* tab, which displays various diagnostic settings and allows one to check the CCD and cold finger temperatures.
 - ◆ The *Config* tab, which you should not need for the most part, although this is where the temporary software lock for the grating is now.
- The panel on the right is an interactive schematic representation of the instrument. Components with in/out or on/off states can be toggled by clicking on the relevant part of the image. The light path is shown in red

so that one can easily verify the instrument configuration.

Start Of Run

Setting name and run number

In the SpUpNIC Control GUI:

- At the start of your run, click on the *Advanced* tab. In the *Observer Info* box, enter your name and increment the run number by +1 from the number that was in there for the previous user. In the past, one would determine the run number by looking in the old triplicate observing log book, but with remote observing and electronic logs in use these days, the last logbook entry may not give the appropriate run number. The Quick-Look GUI keeps a detailed electronic log based on fits header info, but issues have arisen with it mixing up exposures, so users are advised to keep their own logs (e.g. a spreadsheet).

Setting up the grating

- **Observers must not handle the gratings - only trained and authorised technicians may do so.** Before your run you will receive a google form to submit to request your required grating be installed for you. If you need a grating change during your run, you must contact the standby technician.
- SpUpNIC suffered severe grating instability problems that were incrementally reduced through various interventions, the last of which was the introduction (in early November 2016) of a pneumatically-actuated lock to clamp the grating mechanism at the user-defined angle. The lock is under software control and can thus be de-activated by the user in order to adjust the grating. We are delighted to report that the lock has eliminated the last of the play within the grating mechanism! Flexure remains inevitable for a Cassegrain spectrgraph as it swings about the sky on the back of the telescope. Therefore we still recommend that users bracket their target observations with arcs (taken immediately before and after the object exposures) so as to calibrate out any remaining shifts due to flexure.
- The angles listed in the second last column of the table below will get one into the range where lines are visible for a given grating, then adjust the grating angle (decrease/increase the angle to go more red/blue) to obtain the desired wavelength range - consult the sample arcs in the right-hand column of the table and the arc maps linked to below.
- Click on the following links for **Arc Maps** for **G4**, **G5**, **G6** and **G7**. Otherwise, here are additional sets of maps for **CuNe** (for G5) and **CuAr** (for all the other gratings) with many more lines identified.
- Click on the following link for **Sample Spectra of Spectrophotometric Standard Stars** observed with G4, G5, G6 and G7.

Grating	Lines/mm	Blaze (A)	2-Pix (A)	Range (A)	Star Filter	Arc Lamp	Arc Filter	~ Angle	Arc Map
4	1200	5100	1.3	1250	None	CuAr	None	3	•
5	1200	6200	1.1	1130	GG495	CuNe	GG495	-4	•
6	600	5100	2.7	2780	None	CuAr	None for angle=13, but BG38 for angle<12 (wavelength range beyond ~6800A)	13	•

SPUPNIC

7	300	5000	5.4	5550	None	CuAr	BG38	16	·
8	400	8500	4.4	4130	GG495	CuAr	GG495	12	·
9	830	7800	1.7	1750	GG495	CuAr	GG495	0	·
10	1200	10000	0.95	960	GG495	CuAr	GG495	-9	·
11	600	10000	2.5	2600	GG495	CuAr	GG495	7	·
12	300	10000	5.5	5630	GG495	CuAr	GG495	14	·
13	2160	5000	0.54	580	None	CuAr	None	-8	·

- If a grating is mounted in the spectrograph, it will be indicated at the bottom of the *Instrument Setup* pane, e.g. *gr8* in the *Grating* field shows that Grating 8 is installed. Above that is the *Grating angle* field.
- **If you need a different grating, you must ask the standby technician to change it for you.**
- Once you have the correct grating in the spectrograph, enter an approximate starting angle (see the grating table above) in the *Grating angle* box and click *Go*.
- Take an arc and check the wavelength range on the Quick-Look extraction that will appear shortly after the image is read out. Note that it is advisable to double check the arc by displaying the spectrum in e.g. pyRAF, as the Quick-Look plot doesn't always display the arc lines at the end of the wavelength range.
- If the spectrum is too blue (red), decrease (increase) the grating angle and repeat the arc to check the new wavelength range - iterate until happy with the range.
- Note that angle changes <0.05 degrees are too small, so make a larger change and then go back the other way to achieve very small shifts (the software takes care of backlash in the system by ensuring that the desired value is always approached from the appropriate direction).
- The software knows which order-blocking filters should be used with each grating, but it is still a good idea to check that the correct filter is selected (refer to the table above). If necessary, select the required filter from the drop-down menu at the bottom of the *Instrument Setup* pane and click *Go*.
- Please note that **grating 13** was a late addition and **has not yet been incorporated into the software**. This means that the SpUpNIC control software will not report that grating 13 is mounted, and will not know which science filter or arc lamp should be used - users will have to select these themselves based on the table above. The Quicklook software will not be able to identify the arc lines, nor necessarily plot them on a sensible scale - it may be necessary to zoom in on the spectrum in the Quicklook software to see the lines.
- Note that **grating 6** does not require an arc filter when centred on 5100Å (grating angle of 13), which extends to ~6500Å. If you need to include redder wavelengths than this (angles ~12 and below), you will encounter very bright arc lines from ~6800Å and will need a **BG38 filter** in the arc beam to avoid saturation.

Arc lamp and filter selection

- Two arc lamps are permanently mounted in the spectrograph - you no longer need to swap out a lamp - but the arc lamp filters are still changed manually. These will be changed for you by the duty technician when you submit your google form requesting your grating/arc lamp/filter setup. Filter requirements are listed in

the table above.

- The software now decides, based on which grating is in use, which lamp to switch on once ARC is selected from the *Exposure type* drop-down list on the *Exposure/CCD info* pane.
- Alternatively, click on the appropriate lamp icon in the instrument schematic, where 1=CuNe and 2=CuAr. This will switch on the lamp and insert the arc mirror into the beam. Having taken the arc, simply click on the arc mirror icon in the schematic to remove the arc mirror and switch the lamp off. One can also control the lamps using the *Lamp/Mirror Settings* pane of the SpUpNIC Control GUI. Click the appropriate *Change state* button to switch the desired lamp on/off, and to move the arc mirror into the beam to take an arc exposure.

Daily Daytime Tasks

Bias Frames

The spectrograph camera does not have a shutter, so even though bias frames are zero second exposures, you still need to take them when no light can reach the detector. Ideally while the mirror cover is still closed, or at least not while pointing to an object. Make sure the arc lamp, slit illumination, dome lights, etc. are switched off. The bias level on SpUpNIC is stable, but these frames take next-to-no time, so just snap a bunch of them (say 25?) every day.

Dome flat recipe

Dome flats give a measure of the pixel-to-pixel sensitivity variations over the CCD. The dome's white flat-field screen is not perfectly evenly illuminated by the lamps on the top end of the telescope, but the light goes through the slit, gets collimated, diffracted and re-focussed, so that is not a problem. We do not use the sky for this as you would get spectra of the Sun! **Configuring the telescope, dome and lamps for flats is now done entirely from the TCS:**

1. First check the observing floor for ladders or obstructions. If you're observing remotely you can use the webcam, or if you're in the dome just pop upstairs.
2. On the TCS, click the grey "<https://topswiki.sao.ac.za/FLOOR>"<https://topswiki.sao.ac.za> button near the top to change the telescope control to "<https://topswiki.sao.ac.za/TCS>"<https://topswiki.sao.ac.za>.
3. Click the red "[https://topswiki.sao.ac.za/Telescope Power is OFF](https://topswiki.sao.ac.za/Telescope%20Power%20is%20OFF)"<https://topswiki.sao.ac.za> button on the top left. Telescope power will switch on, the button will turn green, and the various subsystem statuses will be populated.
4. Click the red "<https://topswiki.sao.ac.za/Man>"<https://topswiki.sao.ac.za> button on the top right to switch the dome to auto.
5. Click "<https://topswiki.sao.ac.za/CLEAR>"<https://topswiki.sao.ac.za>, then "<https://topswiki.sao.ac.za/DOME>"<https://topswiki.sao.ac.za> and select "[https://topswiki.sao.ac.za/Mirror open](https://topswiki.sao.ac.za/Mirror%20open)"<https://topswiki.sao.ac.za> from the drop down menu.
6. Click "<https://topswiki.sao.ac.za/CLEAR>"<https://topswiki.sao.ac.za> then "<https://topswiki.sao.ac.za/TARGET>"<https://topswiki.sao.ac.za> and a range of buttons will appear. Click on the "[https://topswiki.sao.ac.za/Dome Flat](https://topswiki.sao.ac.za/Dome%20Flat)"<https://topswiki.sao.ac.za> button toward the right. This will slew the telescope to point to a panel on the ceiling, painted white. Once the telescope has stopped moving, the dome will switch to manual.

7. Above the date and time info, click the yellow "https://topswiki.sao.ac.zaFlat Lamp OFF"https://topswiki.sao.ac.za button. It will turn red and the lamps on the top end of the telescope should now be on.
8. On the TCS, make sure the big, green button on the right-hand side says "https://topswiki.sao.ac.zaFOLD MIRROR IS OUT OF BEAM"https://topswiki.sao.ac.za (else click it).
9. On the SpUpNIC Control GUI, make sure there are no mirrors in the light path (no blue border around the spectrograph schematic) and take some trial FLAT exposures to determine the exposure time required to reach ~40k counts. The lamps are quite red, so blue settings (e.g. G4) will need long exposures. It's fine to crank the slit wide open to let more light in (you do not care about resolution here).
10. Take e.g. 15 flats by populating the "https://topswiki.sao.ac.za# Exposures"https://topswiki.sao.ac.za box accordingly.
11. Once you're done, go back to the TCS and:
 1. Turn off the flatfield lights ("https://topswiki.sao.ac.zaFlat Lamp ON"https://topswiki.sao.ac.za button - turns yellow/OFF)
 2. Switch the dome to auto (press "https://topswiki.sao.ac.zaMan"https://topswiki.sao.ac.za - turns green/Auto)
 3. Park the telescope (TARGET menu - click "https://topswiki.sao.ac.zaPark"https://topswiki.sao.ac.za button)
 4. Close the mirror covers (CLEAR --> DOME --> Mirror CLOSE)
 5. If you're finishing here, switch the dome back to manual and turn off telescope power (click Telescope Power is ON --> red/OFF), or if you're opening to observe leave dome in auto and power on.

Focusing The Spectrograph - running a Hartmann sequence

Before each night's observations, you should focus the spectrograph. This is done using a scripted Hartmann sequence run from the SpUpNIC Control GUI. The process moves a shutter halfway into the beam, takes an arc exposure; then blocks the other half of the beam and takes a second arc exposure. The arc lines are then cross-correlated to measure the shift between the two. The procedure is repeated at a range of camera focus positions until the line shifts are minimised, indicating best focus. This procedure may be performed manually, but it is typically run automatically, as follows:

1. Take an arc to check that the grating angle is appropriate for your desired wavelength range, and to get an idea of the required exposure time (aim for at least ~1000 counts in the weaker lines): in the *Exposure/CCD info* pane on the *Main View* tab, select "https://topswiki.sao.ac.zaExposure type"https://topswiki.sao.ac.za = ARC from the drop-down menu, and enter e.g. 10 seconds in the "https://topswiki.sao.ac.zaExposure time"https://topswiki.sao.ac.za box.
2. If satisfied with the arc obtained, locate the *Hartmann focus sequence* panel in the *Instrument Setup* pane on the *Main View* tab of the SpUpNIC Control GUI (if not, adjust the exposure time and grating angle as required before proceeding).
3. Select the *Auto* tab and enter the parameters for the Hartmann sequence: 3.7 for the *initial focus position*, 0.05 for the *focus increment* and 9 for the number of *steps* - with the system still set up as it was for the test arc (lamp on, arc mirror in beam). A bug in the software causes the Hartmann routine to fail if the camera focus isn't first set to the "https://topswiki.sao.ac.zainitial focus pos"https://topswiki.sao.ac.za, so enter 3.7 in the Camera focus "https://topswiki.sao.ac.zaREQUESTED"https://topswiki.sao.ac.za box above, then click "https://topswiki.sao.ac.zaGo"https://topswiki.sao.ac.za. Once the focus has changed, click *Run* to start the Hartmann sequence.
4. The slit width will automatically be set to 1.05"https://topswiki.sao.ac.za and the exposure type will switch to HARTMANN, then the GUI will grey out and not be available during the focus sequence (although you

will see the *Current Camera Focus* field changing and the Hartmann shutters indicate *Moving*.

5. On completion of the sequence: in the SpUpNIC Quick-Look GUI, in the log box to the right of the spectrum display window, you will see a list of focus positions and their corresponding pixel shifts. Best focus corresponds to a shift of zero.
6. The camera focus should automatically be set to the best focus value, but if it isn't, enter the best focus into the *Requested Camera Focus* box on the SpUpNIC Control GUI's *Instrument Setup* pane and click *Go*.
 - The Hartmann sequence ends with the shutter out of the beam, but be sure to select the desired slit width in the *Instrument Setup* pane and click *Go*. Check that it goes to the required position, click *Go* again if it does not do it the first time.
 - Select "https://topswiki.sao.ac.zaExposure type" https://topswiki.sao.ac.za = ARC and take an arc to confirm that the focus looks good.
 - Click on the arc mirror in the schematic to switch off the arc lamp and move the arc mirror out of the beam.

Observing Setup

Target Catalogue File

Target names and coordinates get propagated into the fits headers by loading a target catalogue file into the *Target Info* pane and then selecting the appropriate target. They can also be read by the TCS, so you don't have to type them in there to slew to your target.

- Open a terminal on the SpUpNIC PC and use your favourite text editor to produce a simple text file (e.g. Run007.txt) with the format shown below:

```
Target_1_name HH:MM:SS -DD:MM:SS J2000
Target_2_name HH:MM:SS -DD:MM:SS J2000
Target_3_name HH:MM:SS -DD:MM:SS J2000
```


(Note: do not include spaces in the target names and use single spaces between the object name, RA, Dec and Equinox)

- Click on the *Load Target Catalogue* button, then navigate to, and select, your catalogue.
- In the *Target Name* box, type any character/number that appears in the name of your target, and all targets containing those characters will appear in a dropdown list so you can select the appropriate one.
- If you edit the catalogue file, you'll need to reload it into the GUI before the changes will appear in the drop-down list.

Setting up the slit position on the TCS - using the SpUpNIC Control GUI

The purpose of this step is to figure out where on the acquisition image you need to place your star, in order for it to land close to the ideal spot on the slit. Very bright stars can be seen reflected on the slit jaws, and can be placed on the slit directly, but this is not the case for fainter stars, which need the superior reflectivity of the fold mirror in order to be seen on the acquisition camera. This position should be approximately stable throughout your run, but you can fine-tune the target location using the rear-of-slit camera.

1. Move the fold mirror into the beam: on the right-hand side of the TCS GUI is a big, green button that should say "https://topswiki.sao.ac.zaFOLD MIRROR IS IN BEAM" https://topswiki.sao.ac.za. Click on

- it if it says the mirror is out of beam.
2. Press "<https://topswiki.sao.ac.zaCenter>"<https://topswiki.sao.ac.za> on XY-slides control.
 3. Set Guide Camera Focus to ~29000.
 4. Acquire a bright star (e.g. ~4th mag), roughly centre it in the acquisition camera field and continue exposing.
 5. Focus the telescope (start at ~2180) using the shortest possible exposure time (focusing is best done with a fainter star, but this will be sufficient for getting the position).
 6. Move the fold mirror out of the beam so that light can go down the central hole in the guide mirror.
 7. Move the rear-of-slit mirror into the beam (On SpUpNIC, *Lamp/Mirror Settings* pane, RoS mirror change from *Out of beam* to *In beam*).
 8. Turn on the slit illumination (in the *Instrument Setup* pane, *Change* to turn on the lamp). Tune the exposure time/LUT sliders on the TCS until you can clearly see the slit running horizontally across the acquisition image, approximately halfway up.
 9. Using the hand paddle, move the telescope to place the star on the slit, approximately one quarter of the image width away from the right-hand edge.
 10. Turn off slit illumination.
 11. Click on the icon  for the rear of slit camera (on the left-hand side of Monitor 1).
 12. An image window for the rear-of-slit camera will pop up. This looks up at the slit from below, to enable you to check that your star is centred on the slit. Move the telescope such that the star falls on the centre of the slit image in both x and y.
 13. Move the rear-of-slit mirror out of the beam and take a test spectrum (e.g. 20 seconds) of the bright star (in the *Exposure/CCD info* pane, select *Exposure type* = SCIENCE from the drop-down menu, enter 20 in *Exposure time* and click *Expose*).
 14. The resulting image will be displayed on the Quick-Look GUI, on Monitor 2. You are aiming for the spectrum to fall on approximately the central row of pixels within the image area (note that this is a roughly central band that only covers about half the vertical extent of the CCD). If the spectrum is too high or low, move the telescope slightly in RA (the RA- button moves the spectrum downwards in the image), iterate until the star is well positioned.
 15. Once you are happy with the position of the spectrum on the image, go back to the TCS and add a red marker over the position of the star on the slit (*TCS Pointer* pane: *Markers, Add a red marker*).
 16. Finally, move the fold mirror into the beam, and add a second red marker at the position of the star. This marker will be used to approximately position stars on the slit that are too faint to be seen reflected off the slit jaws.
- The red markers are lost if the TCS software gets restarted, so it is a good idea to note down their coordinates!

Focusing the telescope

- Acquire a ~11th mag star (e.g. one of the spectrophotometric standards) with the fold mirror in the beam and the guide camera focus at ~29000.
- Position the star on the appropriate red box on the acquisition image.
- On the TCS, move the fold mirror out of the beam (so that light reaches the slit).
- On SpUpNIC, insert the rear-of-slit mirror into the beam to direct the light to the Lodestar (rear-of-slit) camera.
- View the stand-alone rear-of-slit software window.
- Click on the "<https://topswiki.sao.ac.zacontinuous>"<https://topswiki.sao.ac.za> button for an ongoing series of 2 second exposures.

SPUPNIC

- Open the slit wide, to about 4" <https://topswiki.sao.ac.za>.
- Adjust the slider bar to the right of the image to adjust the scaling, or hold down the mouse button while mousing over the image, as in ds9.
- Using GUIDE speed, use the RA & Dec arrow buttons on the bottom-right of the TCS GUI (or the hand paddle if in the dome) to position the star near the centre of the slit (in both X and Y).
- Adjust the telescope focus on the TCS (or the hand paddle if in the dome) in steps of 3-5 units and assess how the star image changes.
- The star will move around due to the translation of the secondary mirror, so adjust it back into view if necessary.
- Astigmatism in the system extends the star image diagonally and the orientation indicates whether the focus value is too high or too low:

Star extended from upper-left to lower-right: focus value is too high

Star extended from lower-left to upper-right: focus value is too low

- Best focus is where the star is as round and sharp as possible.
- Optimum focus varies with temperature, typical summer values are ~2200 while cold winter nights may be closer to 2270 units.

Focusing the acquisition/guide camera

- Having focused the telescope as described above, one needs to focus the acquisition/guide camera.
- The star used to focus the telescope may be too bright, so aim for something fainter (e.g. a guide star that needs a ~1 sec exposure).

In February 2024, an instrument selector was installed on the telescope to allow SpUpNIC and SHOC to be mounted simultaneously. Prior to this, the guide mirror was used for SpUpNIC acquisition while in the beam, and for guiding when out of beam. Now, the guide mirror stays " <https://topswiki.sao.ac.za> out of beam" <https://topswiki.sao.ac.za> at all times and is only used for guiding, and a pick off mirror is slid in front of it (covering the slit) for acquisition. The same camera is used for both procedures, and is therefore at a different distance from the two mirrors, so the camera focus must be adjusted between acquisition and guiding:

- During acquisition (fold mirror in beam), camera focus ~29000.
- When guiding (fold mirror out of beam), camera focus ~6000.

Adjust the camera focus by entering the value into the " <https://topswiki.sao.ac.za> Camera Focus" <https://topswiki.sao.ac.za> box toward the lower right of the TCS GUI, and pressing " <https://topswiki.sao.ac.za> Enter" <https://topswiki.sao.ac.za> on the keyboard.

User's Troubleshooting Guide

Please be sure to inform the technical team of any issues you encounter during your run, either by phoning the standby technician for problems that need immediate attention, or for issues that can be addressed during the day, submit a report to the [online fault forum](#).

Re-starting the Quick-Look software

- There is a memory leak in the Quick-Look software which causes its memory consumption to grow larger

SPUPNIC

each time a new spectrum is loaded. To work around this, please restart the quick-look software once daily, or more often if required. Open a terminal and issue the command

```
ps aux | grep ql-spupnic
```

- If nothing is returned, then the quick-look software is not running. If one or more lines are returned, then they describe running instances of the quick-look software.
- Each running process should be terminated before a new instance of the Quick-Look software is started.
- The second column in each line of the output obtained above is a number. This is the process ID (PID) of the running instance. To terminate a running process, issue the command

```
kill -9 <PID>
```

where <PID> is the process ID of the process.

- Once all the quick-look processes have been terminated, start a new instance of quick-look by clicking on the Quick-Look icon on the left-hand task bar.

If the Quick Look does not extract spectra for science frames

- A dialogue box saying "https://topswiki.sao.ac.zaPlease Wait"https://topswiki.sao.ac.za lingers just below the image display and no extracted spectrum appears in the plot below
- Dismiss the dialogue box (and any others piled up behind it) until they are all gone
- Locate the Auto and Manual extraction options just below the spatial profile plot in the upper right of the Quick Look main tab
- Click on whichever one is not currently selected (return to the one you want if it's the one that was originally selected)
- Test by loading a science image by selecting one from the Observing Log tab on the Quick Look
- If the problem persists, again make sure the dialogue box(es) are dismissed before stopping and restarting the Quick Look GUI

The Exposure/CCD Info pane gets a red frame and complains about timing issues

- Go to the Advanced tab on that pane
- Click the Reset Exposure Controls button
- If that does not clear the red frame, close the Control GUI
- Open a terminal and type *restart_services*
- You may be asked for a password, it's the usual one!
- Restart the SpUpNIC Control GUI by clicking on the absorption spectrum quick-launch button

If the slit runs anything but horizontally across the rear-of-slit image, the camera needs mechanical relocation

- The rear-of-slit camera has a spring-loaded kinematic mount which can move slightly if the USB cable snags or the camera gets bumped somehow
- If this happens, the slit image will be displaced, making acquisition difficult
- Insert the rear-of-slit mirror and turn on the slit-illumination to confirm that this is indeed the case
- Go out and grip the rear-of-slit camera assembly (which projects from the south side of the instrument cover) and gently jiggle it - the camera will pop back into its required position

SPUPNIC

- Use the slit illumination to verify that the slit runs horizontally across the image again

If the rear-of-slit (ROSCam) camera window does not produce any images (though the exposures seem to count down), it probably needs a reset

- Check that you've got the light path right: fold mirror out of beam and the rear-of-slit mirror in the beam
- Then check that it's not an image scaling issue, by turning on the slit illumination (which is bright enough to show up under most circumstances)
- If you still don't see anything:

-stop ROSCam exposures

-exit the ROSCam GUI

-press the "<https://topswiki.sao.ac.za>power cycle ROS camera"<https://topswiki.sao.ac.za> button from the TCS GUI

-wait 30s

-restart the ROSCam GUI.

-restart exposures

Technical Notes

Change Log

- **February 2024:** The new fold mirror for the instrument selector is now installed so there are some changes to the routine to do target acquisition and to set up the guider - refer to the wiki for the "https://topswiki.sao.ac.za/Instrument_Selector"<https://topswiki.sao.ac.za>.
- **October 2023:** The new autoguider that forms part of the instrument selector to accommodate both SpUpNIC and SHOC has been commissioned. There are slight changes to the operation of the autoguider, and observers now need to connect to a new TCS PC (tcs74v4.suth) to use the telescope with SpUpNIC.
- **27 September 2017:** SpUpNIC back in service after fixing a bad connection within the pre-amp electronics. On 8 September the detector began producing only zeros and after extensive trouble-shooting, the detector package was removed from the instrument (on 13 September) and sent down to Cape Town for further investigation and subsequent repair. A total of 12 scheduled nights were lost to this extremely serious failure (although the two observers affected worked with SHOC instead).
- **3 August 2017:** Completed extensive testing of various gratings (particularly G7) in order to characterise the ghosting issues reported previously.
- **29 July 2017:** Moved the SpUpNIC utility panel to improve the routing of the cables and air hose for the pneumatics to reduce the pointing restrictions in the south east. New software limits will soon be implemented to take advantage of the increased clearance between the spectrograph and the north pier.
- **10 April 2017:** G7 replaced with an almost identical new one that does not have fingerprints or scratches! The blaze of the new one is at 5000Å, rather than 4600Å, since the latter is no longer available from the manufacturer. The 5000Å blaze is also a better match for the peak response of this CCD.
- **30 March 2017:** New functionality added to the GUI for the rear-of-slit (Lodestar) camera to allow background subtraction. There is now also a slider bar to adjust the brightness of the display, this works

best with background subtraction applied.

- **20-25 January 2017:** Engineering run during which the cryostat was re-aligned to the rest of the instrument in an attempt to remove what was thought to be coma in the images. Eventually concluded that the faint tails extending redward of arc lines are an optical ghost - a series of reflections thought to arise as light bounces between the CCD and the field-flattener lens that forms the cryostat window. There is no simple fix for this so the effect will just have to be quantified.
- **21 December 2016:** Initial documentation for Quick-Look GUI added:
https://topswiki.sao.ac.za/index.php/Quick_Look_Tool
- **6-13 December 2016:** Another intensive week of software refinement! Highlights include the introduction of: the ability to send target coordinates from the SpUpNIC target catalogue file to the TCS (both for pointing and for downloading finder charts), a new exposure tab for automatically running sequences of exposures (e.g. arc-object-arc procedures), a more streamlined Hartmann routine, as well as the general tidying up of various minor software issues. Also the start of comprehensive documentation of the SpUpNIC Control and Quick-Look GUIs.
- **9 November 2016:** Installed a new grating lock that restores full software control of the grating mechanism, while maintaining stability of the grating angle. The user can now change gratings and optimise the wavelength range by changing the grating angle via the SpUpNIC Control GUI (without having to call for technical support).
- **5 August 2016:** The cryostat lost vacuum and warmed up. We're not sure what caused this, but suspect that the cryostat valve had not been closed tightly enough and so the vacuum gradually degraded. Leak-testing revealed nothing so we pumped the cryostat over night and the observers were back on-sky a night later.
- **30 July 2016:** A new version of the Quick-Look GUI has been installed and seems to be working reliably, please report any issues to Lisa Crause (lisa_at_sao.ac.za).
- **28 July 2016:** The SpUpNIC optics fogged up due to a massive condensation event in the 1.9-m dome. A temporary dry nitrogen purge was introduced into the instrument to drive out the moisture - fortunately no real harm was done.
- **1 June 2016:** Disabled the input field and *Go* button for changing the grating angle in the instrument control GUI (to accompany the hardware changes described below). Please contact the standby electronics technician if you wish to change either the grating angle or the grating.
- **26 May 2016:** A mechanical brake was installed on the grating mechanism to eliminate play in the system (this will be replaced with an electro-mechanical solution to be developed over the coming months).
- **25 May 2016:** The inner surfaces of the instrument covers were coated with resin to stop the generation of fine fibre-glass dust.
- **5 May 2016:** The optics in the lower box were cleaned to get rid of the fine dust that was being liberated by the instrument covers.
- **16-23 December 2015:** The SpUpNIC software evolved substantially during this week. The wiki has been adapted to reflect these and other subsequent changes.